

5

LUCAS

Quality

EQUIPMENT



CAR EQUIPMENT DETAILS
AND SPARE PARTS FOR

ROVER LANDROVER

1950



JOSEPH LUCAS LTD · BIRMINGHAM 19 · ENGLAND

LUCAS SPARE PARTS

ILLUSTRATION	DESCRIPTION OF PART	ORDERING No.
 <p>227680, 220258, 238367, 180740, 227305, 227291, 227346, 227594, 189307, 227627, 228159, 227726</p>	<p>DYNAMO, C39PV L-0 22250</p> <p>Cover, band 227627</p> <p>Brush set 227305</p> <p>Bracket, commutator end 227594</p> <p>Bush, commutator end 220258</p> <p>Oiler 238367</p> <p>Springs, set, brush 228159</p> <p>Bearing, drive end 189307</p> <p>Bracket, drive end 227346</p> <p>Nut, shaft 180740</p> <p>Armature 227680</p> <p>Coils, field 227291</p> <p>Sundry parts, set 227726</p>	
 <p>255827, 255945, 255557, 256762, 270889, 256578, 255853, 270883, 250626, 270889, 76401, 255659, 255672, 290081, 255854, 291362, 76401, 255659, 270004, 255727, 255863, 255673</p>	<p>STARTER, M418G G76 25514</p> <p>Cover, band 255557</p> <p>Cap, shaft 255854</p> <p>Brushes, pair 255659</p> <p>Bracket, commutator end 255827</p> <p>Bush, commutator end 250626</p> <p>Springs, set, brush 270004</p> <p>Transmission plate 291362</p> <p>Sleeve and rubber 290081</p> <p>Pinion and sleeve 255672</p> <p>Spring, pinion retaining 255727</p> <p>Bracket, drive end 255673</p> <p>Bush, drive end 270883</p> <p>Bracket, intermediate 255945</p> <p>Bush, intermediate 255853</p> <p>Armature 255863</p> <p>Coils, field 256578</p> <p>Sundry parts, set 256762</p> <p>Switch, starter, ST18 76401</p>	
 <p>409922, 407044, 408355, 404435, 400904/S, 415729, 416068/S, 400843, 408120, 414909, 407050, 410590, 189272, 40154, 415707, 416521, 45012</p>	<p>COIL, Ignition, B12 45012</p> <p>Nut, H.T. terminal 401820</p> <p>DISTRIBUTOR, DVXH4A 40154</p> <p>Plate 414909</p> <p>Cover 415707</p> <p>Brush and spring 404435</p> <p>Rotor arm 408355</p> <p>Contact set 407050</p> <p>Condenser 407044</p> <p>Unit, vacuum 400904/S</p> <p>Cam 409922</p> <p>Springs, auto advance 416068/S</p> <p>Weights, auto advance 415729</p> <p>Shaft and action plate 416521</p> <p>Bearing, top 189272</p> <p>Bearing bush, bottom 410590</p> <p>Sundry parts set 400843</p>	



LUCAS SPARE PARTS

ILLUSTRATION	DESCRIPTION OF PART	ORDERING No.
 <p>364595 315069 301187 31199 38043 310392 34035 38046 31109</p>	<p>INSTRUMENT PANEL PARTS</p> <p>Ammeter, CZ26 L8 364595</p> <p>Switch box, PLC6 L133 34035</p> <p>Switch, choke warning light, 54C ... 31109</p> <p>Switch, panel light, PS15/1 L4 ... 31199</p> <p>Knob, panel light switch 315069</p> <p>Switch, trafficator, TS82 310392</p> <p>Socket, inspection lamp 301187</p> <p>Warning light, WL3/1 38046</p> <p>Warning light, choke, WL3/1 38043</p>	
 <p>552905 552912 504665 552402 50579 553561 552906 858540 504801 551966 180370 50124 552282 552103 52047 571465 523986 552264 524775 524552 53072 524778 524797</p>	<p>HEADLAMP, L-WD-H0 50124</p> <p>Rim and glass 552261</p> <p>Wires, glass fixing 504665</p> <p>Glass 552282</p> <p>Bead, rubber 551959</p> <p>Reflector 551966</p> <p>Bulb holder, double contact 504801</p> <p>Nut, fixing 180370</p> <p>The following headlamps fitted from Vehicle No. D6112001.</p> <p>HEADLAMP, F700, Right Hand Home ... 50579</p> <p>Rim 552912</p> <p>Screw, rim fixing 552816</p> <p>Excluder, rubber 552906</p> <p>Unit, light 552402</p> <p>Rim, light unit 552905</p> <p>Adaptor, single contact 858540</p> <p>Gasket, body 553561</p> <p>HEADLAMP, F700, Left Hand Home and dip right ... 50799</p> <p>Adaptor, double contact 858543</p> <p>Otherwise as 50579.</p> <p>HEADLAMP, F700, Export U.S.A. 50807</p> <p>Adaptor, Ward and Goldstone 553724</p> <p>Less light unit, otherwise as 50579.</p> <p>LAMP, SIDE, 451 52047</p> <p>Rim and glass 571645</p> <p>Bead 523986</p> <p>Interior, bulb holder 552103</p> <p>LAMP, STOP TAIL, ST51/1 53072</p> <p>Body 524775</p> <p>Glass, stop and tail 522264</p> <p>Glass, number plate 524797</p> <p>Screw, body fixing 524552</p> <p>Fixing parts, set 524778</p>	
 <p>069344 701686 334956 334906 334977 188218 37065</p>	<p>HORN, Electric, HF1235 069344</p> <p>Bracket 701686</p> <p>CONTROL BOX, RF96/2 L13 37098</p> <p>Cover 334904</p> <p>Clip 334906</p> <p>Resistance 334977</p> <p>CONTROL BOX, RF95/2 L2 37065</p> <p>Cover 334956</p> <p>Clip 334906</p> <p>Resistance 334977</p> <p>Fuse 188218</p>	




LUCAS SPARE PARTS

ILLUSTRATION

DESCRIPTION OF PART

ORDERING No.

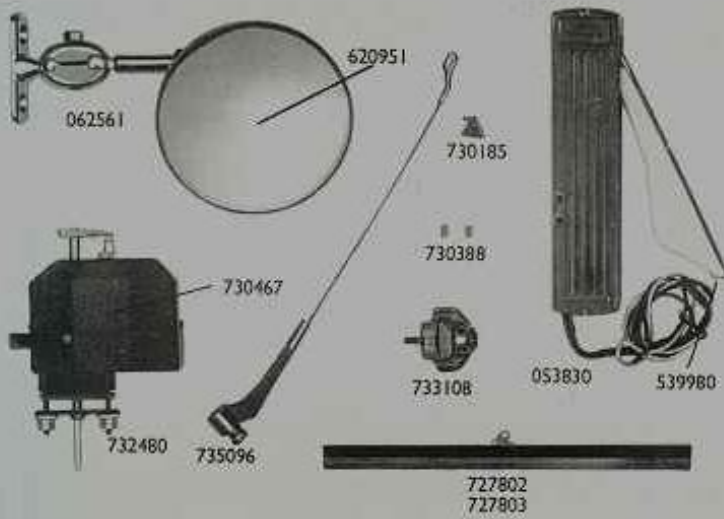

SCREENWIPER, CW1

Motor	732480
Cover	730467
Brush set	730388
Armature	733108
Arm	735096
Blade	727803
Stop, rubber	730185

MIRROR, 540

Glass	620951
--------------	--------

TRAFFICATOR, SE62

Arm	539980
------------	--------

CONTROLS AND SUNDRY FITTINGS

CONTROL, STEERING COLUMN, G/12/48

Top cover assembly	324530
Horn push assembly	323740
Lever, dip switch	323249

FUSE BOX, SF5/2

Fuse	385211
Fuse	188218

JUNCTION BOX, 6J

	770017
--	--------

SWITCH, STOP TAIL LAMP, 54C

Spring	315725
---------------	--------

BULBS

Headlamp, L-WD-HO	171
Headlamp, right hand Home, F700	162
Headlamp, left hand dip, F700	300
Headlamp, right hand dip, F700	301
Side light	207
Stop tail	207
Panel illumination	207
Warning light	970
Trafficator	256

CABLES

Main harness for RF95/2 control box	978061
Main harness for RF96/2 control box	975260
Headlamp and horn harness	859051
Positive, battery to earth	859054
Negative, battery to switch	810848

