

# LUCAS

*Quality*

## EQUIPMENT

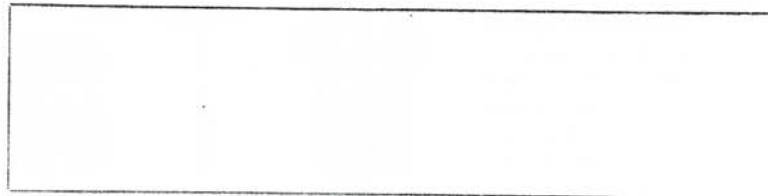 


CAR EQUIPMENT DETAILS  
AND SPARE PARTS FOR

### ROVER LANDROVER

STATION WAGON

1950

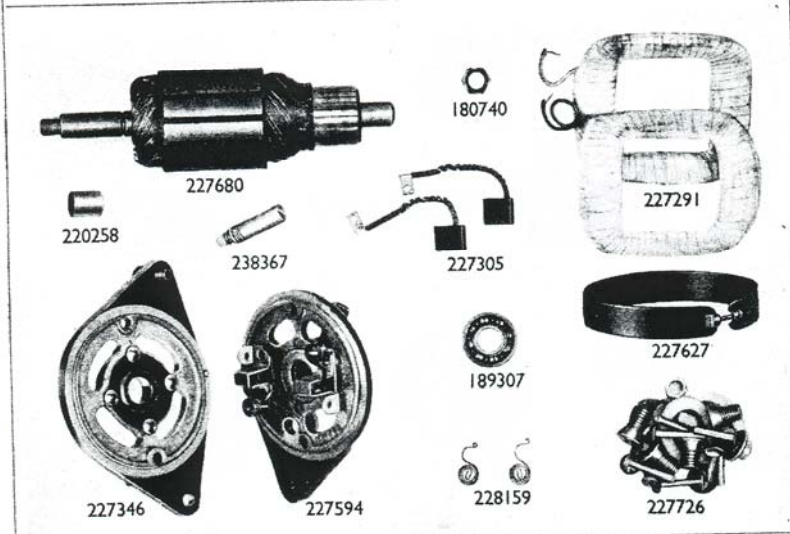 
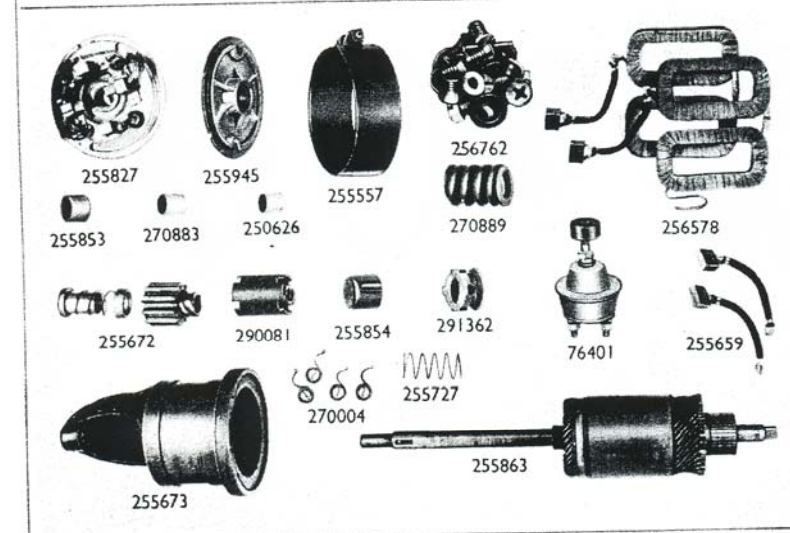 
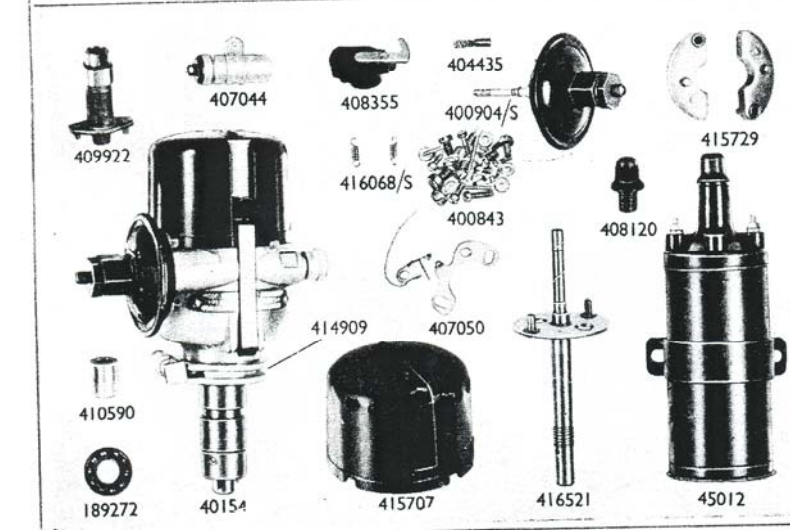 


JOSEPH LUCAS LTD · BIRMINGHAM 19 · ENGLAND

Publication No. CE642  
February, 1951

Printed in England

# LUCAS SPARE PARTS

ILLUSTRATION	DESCRIPTION OF PART	ORDERING No.
 <p>227680 220258 238367 227305 180740 227291 189307 227627 227346 227594 228159 227726</p>	<p><b>DYNAMO, C39PV L-0</b> ... ..</p> <p>Cover, band ... ..</p> <p>Brush set ... ..</p> <p>Bracket, commutator end ... ..</p> <p>Bush, commutator end ... ..</p> <p>Oiler ... ..</p> <p>Springs, set, brush ... ..</p> <p>Bearing, drive end ... ..</p> <p>Bracket, drive end ... ..</p> <p>Nut, shaft ... ..</p> <p>Armature ... ..</p> <p>Coils, field ... ..</p> <p>Sundry parts, set ... ..</p>	<p><b>22250</b></p> <p>227627</p> <p>227305</p> <p>227594</p> <p>220258</p> <p>238367</p> <p>228159</p> <p>189307</p> <p>227346</p> <p>180740</p> <p>227680</p> <p>227291</p> <p>227726</p>
 <p>255827 255853 270883 250626 255945 255557 256762 270889 256578 255672 290081 255854 291362 255727 270004 255863 76401 255659</p>	<p><b>STARTER, M418G G76</b> ... ..</p> <p>Cover, band ... ..</p> <p>Cap, shaft ... ..</p> <p>Brushes, pair ... ..</p> <p>Bracket, commutator end ... ..</p> <p>Bush, commutator end ... ..</p> <p>Springs, set, brush ... ..</p> <p>Plate, transmission ... ..</p> <p>Sleeve and rubber ... ..</p> <p>Pinion and sleeve ... ..</p> <p>Spring, pinion retaining ... ..</p> <p>Bracket, fixing ... ..</p> <p>Bush, fixing ... ..</p> <p>Bracket, intermediate ... ..</p> <p>Bush, intermediate bracket ... ..</p> <p>Armature ... ..</p> <p>Coils, field ... ..</p> <p>Sundry parts, set ... ..</p> <p>Switch, starter, ST18 ... ..</p>	<p><b>25514</b></p> <p>255557</p> <p>255854</p> <p>255659</p> <p>255827</p> <p>250626</p> <p>270004</p> <p>291362</p> <p>290081</p> <p>255672</p> <p>255727</p> <p>255673</p> <p>270883</p> <p>255945</p> <p>255853</p> <p>255863</p> <p>256578</p> <p>256762</p> <p>76401</p>
 <p>409922 407044 408355 404435 400904/S 415729 416068/S 400843 408120 414909 407050 410590 189272 40154 415707 416521 45012</p>	<p><b>COIL, Ignition, B12 L</b> ... ..</p> <p>Nut, H.T. terminal ... ..</p> <p><b>DISTRIBUTOR, DVXH4A</b> ... ..</p> <p>Plate ... ..</p> <p>Cover ... ..</p> <p>Brush and spring ... ..</p> <p>Rotor arm ... ..</p> <p>Contact set ... ..</p> <p>Condenser ... ..</p> <p>Unit, vacuum... ..</p> <p>Cam ... ..</p> <p>Springs, auto advance ... ..</p> <p>Weights, auto advance ... ..</p> <p>Shaft and action plate ... ..</p> <p>Bearing, top ... ..</p> <p>Bearing bush, bottom ... ..</p> <p>Sundry parts, set ... ..</p>	<p><b>45012</b></p> <p>408120</p> <p><b>40154</b></p> <p>414909</p> <p>415707</p> <p>404435</p> <p>408355</p> <p>407050</p> <p>407044</p> <p>400904/S</p> <p>409922</p> <p>416068/S</p> <p>415729</p> <p>416521</p> <p>189272</p> <p>410590</p> <p>400843</p>



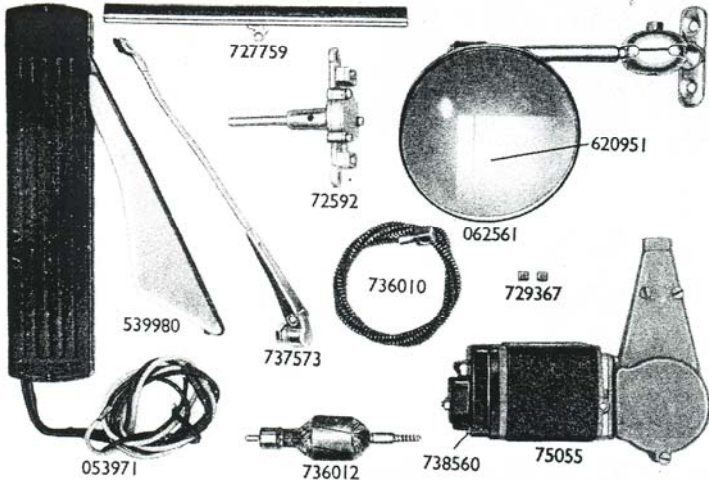 
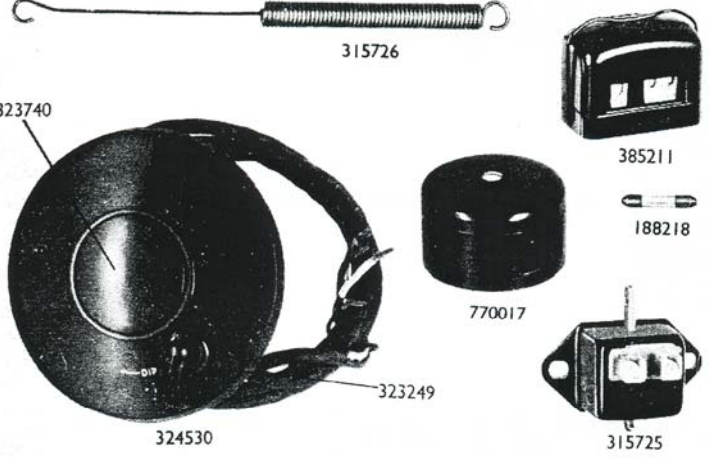 
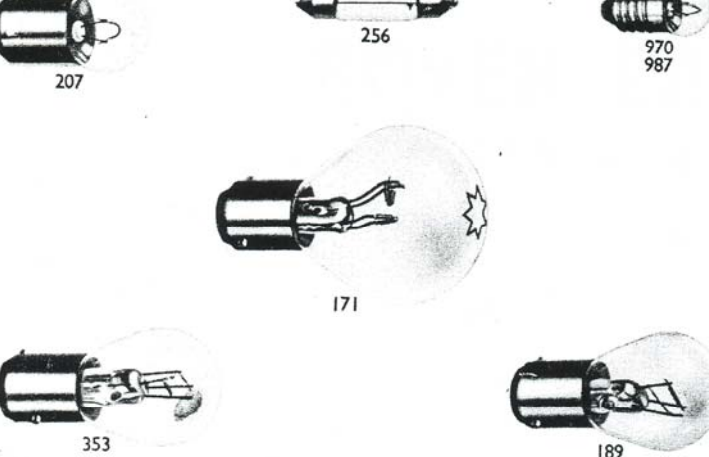 


# LUCAS SPARE PARTS

ILLUSTRATION	DESCRIPTION OF PART	ORDERING No.
<p>38043 38046</p> <p>38052</p> <p>31109</p> <p>364595</p> <p>31078A</p> <p>34035</p> <p>315069</p> <p>31199</p>	<p><b>INSTRUMENT PANEL PARTS</b></p> <p>Ammeter, CZ26 L8 ... ..</p> <p>Switch box, PLC6 LI33 ... ..</p> <p>Switch, choke warning light, 54C ... ..</p> <p>Switch, panel light, PS15/I L4 ... ..</p> <p>Knob, panel light switch ... ..</p> <p>Socket, inspection lamp ... ..</p> <p>Warning light, WL3/I ... ..</p> <p>Warning light, WL3/I, choke ... ..</p> <p>Warning light, trafficator, WL12 ... ..</p> <p>Warning light, main beam, WL12... ..</p> <p>Switch, trafficator, SC/14G ... ..</p>	<p>364595</p> <p>34035</p> <p>31109</p> <p>31199</p> <p>315069</p> <p>301187</p> <p>38046</p> <p>38043</p> <p>38052</p> <p>38052</p> <p>31078A</p>
<p>552282</p> <p>552261</p> <p>551959</p> <p>551966</p> <p>180370</p> <p>50124</p> <p>572706</p> <p>504801</p> <p>504665</p> <p>552101</p> <p>572704</p> <p>572703</p> <p>52162</p> <p>524775</p> <p>522264</p> <p>53072</p> <p>524778</p> <p>524797</p> <p>572734</p>	<p><b>HEADLAMP, L-WD-H0</b> ... ..</p> <p>Rim and glass... ..</p> <p>Wires, glass fixing ... ..</p> <p>Glass ... ..</p> <p>Bead, rubber ... ..</p> <p>Reflector ... ..</p> <p>Bulb holder, double contact ... ..</p> <p>Nut, fixing ... ..</p> <p><b>LAMP, SIDE, 488</b> ... ..</p> <p>Rim ... ..</p> <p>Lens ... ..</p> <p>Body, rubber... ..</p> <p>Interior ... ..</p> <p><b>LAMP, STOP TAIL, ST51/I</b> ... ..</p> <p>Body ... ..</p> <p>Glass, tail ... ..</p> <p>Glass, number plate ... ..</p> <p>Fixing parts, set ... ..</p> <p><b>LAMP, STOP TAIL, 488</b> Later fitment ... ..</p> <p>Rim ... ..</p> <p>Lens ... ..</p> <p>Body, rubber... ..</p> <p>Interior, stop tail ... ..</p>	<p><b>50124</b></p> <p>552261</p> <p>504665</p> <p>552282</p> <p>551959</p> <p>551966</p> <p>504801</p> <p>180370</p> <p><b>52162</b></p> <p>572734</p> <p>572706</p> <p>572703</p> <p>552101</p> <p><b>53072</b></p> <p>524775</p> <p>522264</p> <p>524778</p> <p>524797</p> <p>572734</p>
<p>069344</p> <p>701686</p> <p>334956</p> <p>334906</p> <p>37065</p> <p>334977</p> <p>188218</p>	<p><b>HORN, Electric, HFI235</b> ... ..</p> <p>Bracket ... ..</p> <p><b>CONTROL BOX, RF96/2 LI3</b></p> <p>Cover ... ..</p> <p>Clip ... ..</p> <p>Resistance ... ..</p> <p><b>CONTROL BOX, RF95/2 L2</b> Later fitment ... ..</p> <p>Cover ... ..</p> <p>Clip ... ..</p> <p>Resistance ... ..</p> <p>Fuse ... ..</p>	<p><b>069344</b></p> <p>701686</p> <p><b>37098</b></p> <p>334904</p> <p>334906</p> <p>334977</p> <p><b>37065</b></p> <p>334956</p> <p>334906</p> <p>334977</p> <p>188218</p>



# LUCAS SPARE PARTS

ILLUSTRATION	DESCRIPTION OF PART	ORDERING No.
 <p>727759 72592 539980 737573 053971 736012 738560 75055 620951 062561 729367 736010</p>	<p><b>SCREENWIPER, CR4 G96</b></p> <p>Motor ... .. 75055</p> <p>Cover, end, bakelite ... .. 738560</p> <p>Brush set ... .. 729367</p> <p>Armature ... .. 736012</p> <p>Crosshead and rack ... .. 736010</p> <p>Wheelbox ... .. 72592</p> <p>Arm ... .. 737573</p> <p>Blade ... .. 727759</p> <p><b>MIRROR, 540/UMB2</b> ... .. <b>062561</b></p> <p>Glass ... .. 620951</p> <p><b>TRAFFICATOR, SE62</b> ... .. <b>053971</b></p> <p>Arm ... .. 539980</p>	
 <p>315726 323740 324530 323249 315725 385211 188218 770017</p>	<p><b>CONTROLS AND SUNDRY FITTINGS</b></p> <p><b>CONTROL, STEERING COLUMN, G/12/48</b></p> <p>Top cover assembly ... .. 324530</p> <p>Horn push ... .. 323740</p> <p>Dip switch cover ... .. 323249</p> <p><b>FUSE BOX, SF5/2</b> ... .. <b>385211</b></p> <p>Fuse ... .. 188218</p> <p><b>JUNCTION BOX, 6J</b> ... .. <b>770017</b></p> <p><b>SWITCH, STOP LAMP, 54C</b> ... .. <b>315725</b></p> <p>Spring ... .. 315726</p>	
 <p>207 256 171 353 970 987 189</p>	<p><b>BULBS</b></p> <p>Headlamp ... .. 171</p> <p>Side light ... .. (189 Index type) 353</p> <p>Stop tail ... .. (207 Index type) 189 353 Later fitment index type</p> <p>Warning light, ignition and choke ... .. 970</p> <p>Warning light, trafficator and main beam ... .. 987</p> <p>Trafficator ... .. 256</p> <p><b>CABLES</b></p> <p>Main harness for RF95/2 control box ... .. 978061</p> <p>Main harness for RF96 control box ... .. 975260</p> <p>Positive, battery to earth ... .. 859054</p> <p>Negative, battery to switch... .. 810848</p>	

